



PS/2 6pin Mini-DIN Connection Diagram

	KEYBOARD-IN		MOUSE-IN
GND	1	2	N.C.
CLK	3	4	+5V
DATA	5	6	DATA
+5V	7	8	CLK
N.C.	19	10	GND

*TransKey-II PCB Mouse/Keyboard Header J1
(End View)*

	From: KEYBOARD CONNECTOR		From: MOUSE CONNECTOR
RED	1	2	N.C.
YEL	3	4	GRN
BRN	5	6	BRN
GRN	7	8	YEL
N.C.	9	10	RED

*Modified Dual StarTech PLATE6F Header Plug Connections
(Top Wire-Side View of Plug Housing)*

Note: Reversing the plug connector will not do any damage, but it will swap the mouse and keyboard connection, which will result in a non-working system if not corrected.